

Combination Lock

Sven Christiansen plc

T: 01384 400120

E: service@sven.co.uk


W: sven.co.uk



User instructions

A) PRIVATE USE (default)

This is the most common function and is used where the same code will be repeatedly used.

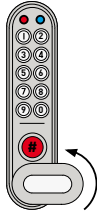

① Place items in locker.

② Turn lever to locked position.



③ To re-open enter your code, e.g. 1234.




④ Turn lever to the open position.

⑤ Remove all items from the locker.

B) PUBLIC USE

This function is used for short term, multi occupancy applications, e.g. a locker in a leisure centre.

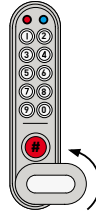


① Place items in locker.

② Turn lever to locked position.



③ Enter your own personal 4-digit code, e.g. 1234.

④ To re-open enter your code, e.g. 1234.

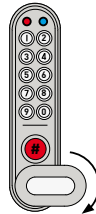

⑤ Turn lever to the open position.

⑥ Remove all items from the locker.


CHANGING THE USER CODE

The lock must be in the open position with the **#** button visible.

#User Code • New User Code • New User Code ••

Example: **#**2244 • 6688 • 6688 ••

Result: User Code now 6688.

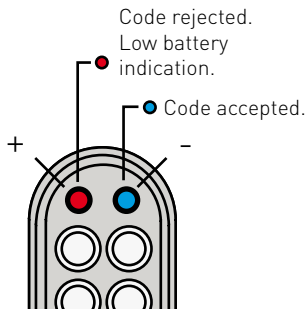

BATTERY FAILURE OVERRIDE

The lock should provide well in excess of 15,000 openings, the lock will operate for 100 times after low battery warning.

- Place the contact points of the PP3 (9v) battery against the contact points surrounding the Blue and Red LED's.
- Enter the Master Code or User Code.

PENALTY TIME

Entering three incorrect codes will cause the lock to shutdown for 10 seconds.