



Quick Start Guide

1. Initial setup: press and hold **UP** and **DOWN** buttons, the desk will move down to it's lowest position. It is now ready to use.
2. Up and down movement: Press and hold either the **UP** or **DOWN** button to move up or down.
3. Memory function (4 positions): Adjust to the desired height with the **UP** and **DOWN** buttons. Press and hold memory key 1/2/3/4 with either the **UP** or **DOWN** button for 2 seconds, the LCD screen will display P1/P2/P3/P4. Press and hold memory key 1/2/3/4 to move do the memorised position.



sven.co.uk